


***LevelLift***  
**“L” Series**  
***UltraLift***  
**“UL” Series**  
**“UL2” Series**



**TO LIFT BOAT**

- 1 Position boat over lift and attach Guide ropes to rear cleats of boat.

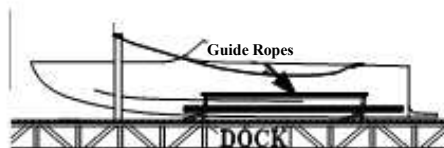

- 2 Rotate Valve Handle to LIFT/LAUNCH and turn Blower Switch ON. NOTE: If Blower does not activate, reset GFCI switch.
- 3 Gently push boat back until Guide Ropes are taut and bow is centered over lift. 4 Release boat when lift contacts the hull.
- 5 When large air bubbles appear from under the tanks, turn Blower Switch OFF and rotate valve handle to DRY DOCK.

**TO LAUNCH BOAT**

- 1 Rotate Valve Handle to LIFT/LAUNCH position.  
**LEAVE BLOWER SWITCH OFF.**
- 2 When boat is floating freely, rotate Valve Handle to DRY DOCK.
- 3 Remove Guide Ropes from boat.

